# SIEMENS



Synco™ 700

## **Heating Controller**

## RMH760B

- Heating controller of modular design for medium-size or large buildings with own heat source or a district heating connection. Can be used as a heating circuit controller and / or primary controller, boiler controller or DHW controller
- 41 programmed plant types
- Menu-driven operation with separate operator unit (plug-in type or detached)
- Konnex bus connection facility for operation and process information

Use		
Types of buildings	<ul><li>Office and administrative buildings</li><li>Commercial buildings and shops</li></ul>	
	Schools	
	Hospitals	
	<ul> <li>Industrial buildings and workshops</li> </ul>	
	Apartment blocks and terraced houses	
Types of plant	<ul> <li>Heating sections of ventilation and air conditioning plant</li> </ul>	
	<ul> <li>Distribution zones of ventilation and air conditioning plant</li> </ul>	
	<ul> <li>Heating systems with own heat generation</li> </ul>	
	<ul> <li>Heating systems with direct or indirect district heating connection</li> </ul>	
	<ul> <li>Heating groups of larger plant (e.g. community heating systems)</li> </ul>	
	<ul> <li>Basic load heating systems</li> </ul>	

**KNX** 

## Functions

Note	Several of the functions listed necessitate extension modules. Refer to page 9 ff.
Control loops and control outputs	<ul> <li>Maximum 6 control systems with modulating output (3-position or DC 010 V):</li> <li>Modulating burner</li> <li>Heating circuit with mixing valve</li> <li>Precontrol with mixing valve</li> <li>Maintained boiler return temperature with mixing valve</li> <li>Control of a maximum of 6 pumps (single pumps or twin pumps)</li> </ul>
Heating circuit control	Control of a maximum of 3 individual heating circuits (independently)
Functions per heating circuit	<ul> <li>Weather-compensated flow temperature control with own outside sensor</li> <li>Mixing or pump heating circuit</li> <li>Room operating modes: <ul> <li>AUTO: Automatic changeover between 3 setpoints according to the time program</li> <li>Comfort: Continuous heating to the Comfort setpoint</li> <li>Precomfort: Continuous heating to the Precomfort setpoint</li> <li>Economy: Continuous heating to the Economy setpoint</li> <li>Protection: Heating to the setpoint of protective mode, if required</li> <li>Delivery of current operating mode to 2 relays</li> </ul> </li> <li>7-day program with a maximum of 6 switching points per day</li> <li>Holiday functions: <ul> <li>Holiday functions:</li> <li>Holiday and special day program with up to 16 periods per year</li> <li>Selectable room operating mode for holidays</li> <li>Time program for special days</li> </ul> </li> <li>Adjustable setpoints for the room operating modes</li> <li>Adjustable setpoints for the room operating modes</li> <li>Adjustable room temperature influence</li> <li>Optimum start / stop control</li> <li>Boost heating and quick setback</li> <li>Room model for room functions without room temperature sensor</li> <li>Automatic heating limits for Comfort and Economy mode</li> <li>Automatic changeover to summer operation (heating off)</li> <li>Maximum limitation of the room temperature</li> <li>Limitation of the rate of flow temperature increase</li> <li>Outside temperature-dependent frost protection for the plant</li> <li>Remote setpoint adjuster for relative or absolute room setpoint adjustment</li> <li>Multifunctional QAW740 room unit for a choice of heating circuit functions</li> <li>External contacts for changeover of operating mode, timer function, etc.</li> </ul>
Functions for all heating circuits	<ul><li>Adjustable solar compensation</li><li>Adjustable wind compensation</li></ul>
District heating functions	<ul> <li>Raising the reduced room temperature when the outside temperature drops</li> <li>Outside temperature-dependent constant-shifting-constant maximum limitation of the return temperature</li> <li>Reception of heat meter pulses for limiting the flow rate or the output</li> </ul>

Boiler temperature	• Control of the boiler temperature with a 1-stage, 2-stage or modulating burner
control	(modulating burner with modulating 3-position or DC 010 V control, with checkback signal)
	<ul> <li>Acquisition of the flue gas temperature, with alarm when limit value is reached</li> </ul>
	<ul> <li>Acquisition of the pump's flow rate</li> </ul>
	<ul> <li>Maximum and minimum limitation of the boiler temperature</li> </ul>
	Maintained boiler return temperature controlled via mixing valve (3-position or
	DC 010 V), or bypass pump
	<ul> <li>Control of a shutoff valve, with checkback signal</li> </ul>
	<ul> <li>Selection of boiler operating mode</li> </ul>
	Limitation of the burner's minimum running time and of the return temperature
	Protective boiler startup
	Release of boiler     Flue gee measuring mode (bailer test mode, shimpey eveen function)
	<ul> <li>Flue gas measuring mode (boiler test mode, chimney sweep function)</li> <li>3 fault inputs, preconfigured for overpressure, underpressure, and water shortage</li> </ul>
	<ul> <li>Burner hours run meter and burner start counter</li> </ul>
Main control	<ul> <li>Acquisition and evaluation of heat requests (via Konnex bus, external setpoint,</li> </ul>
	external DHW request, and frost protection)
	<ul> <li>Demand-compensated main control via mixing valve (3-position or modulating), or of</li> </ul>
	the system pump installed in the main flow
	<ul> <li>Minimum and maximum limitation of the main flow temperature</li> </ul>
	Shifting maximum limitation of the main return temperature
	Maximum limitation of the main return temperature during DHW heating
	<ul> <li>Reception of heat meter pulses for limiting the flow rate or the output</li> </ul>
Precontrol	<ul> <li>Acquisition and evaluation of heat requests (via Konnex bus, external setpoint,</li> </ul>
	external DHW request, and frost protection)
	• Demand-compensated precontrol via mixing valve (3-postion or modulating), or of the
	system pump installed in the flow
	<ul> <li>Minimum and maximum limitation of the flow temperature</li> </ul>
	<ul> <li>Shifting maximum limitation of the main temperature</li> </ul>
	<ul> <li>Maximum limitation of the return temperature during DHW heating</li> </ul>
	<ul> <li>Reception of heat meter pulses for limiting the flow rate or the output</li> </ul>
DHW heating	<ul> <li>Several DHW variants available:</li> </ul>
Drive neating	<ul> <li>Storage tank charging via internal heat exchanger</li> </ul>
	<ul> <li>Storage tank charging via external heat exchanger (optionally with maintained</li> </ul>
	secondary temperature)
	<ul> <li>Storage tank charging with electric immersion heater</li> </ul>
	<ul> <li>Direct DHW consumption via heat exchanger</li> </ul>
	<ul> <li>Downstream consumer control (control of the DHW temperature at the tap)</li> </ul>
	<ul> <li>Maximum limitation of the return temperature</li> </ul>
	Proof of flow with flow switch
	Reception of heat meter pulses for limiting the flow rate or the output
	Legionella function
	• 7-day time switch with a maximum of 6 switching points per day for DHW heating
	<ul> <li>7-day time switch with a maximum of 6 switching points per day for the circulating pump</li> </ul>
	Operating modes:
	<ul> <li>AUTO: Automatic changeover between Normal and Reduced in accordance with</li> </ul>
	the time program
	<ul> <li>Continuously Normal</li> </ul>
	- Continuously Reduced
	– Protection

- Holiday functions
  - Selectable DHW operating mode for holidays
  - Holiday and special day program with 16 periods per year
  - Time program for special days
- External contact for changeover of operating mode

General functions for all control loops	
Yearly clock	Yearly clock with automatic summer- / wintertime changeover.
Measuring and signal inputs	All measuring and signal inputs are configurable. Signals can be: • LG-Ni 1000 • DC 010 V • Pt 1000 • T1 • NTC 575 • Digital
Data acquisition	<ul> <li>4 meters are available for acquiring consumption values.</li> <li>Suited for handling pulses delivered by gas, hot water, cold water and electricity meters</li> <li>Pulse counting in Wh, kWh, MWh, kJ, MJ, GJ, ml, I, m<sup>3</sup>, heat cost units, BTU, or with no unit</li> </ul>
Other control functions	<ul> <li>Control of actuators (3-position or DC 010 V)</li> <li>Pump control</li> <li>Control of twin pumps</li> <li>Indication of heat demand</li> <li>Configurable relays</li> </ul>
Supervisory and protective functions	<ul> <li>Valve overrun, valve kick</li> <li>Pump overrun, pump kick</li> <li>Frost protection for the building</li> <li>Supervision of overloads</li> <li>Fault indication via red LED</li> <li>Fault relay</li> <li>Handling of status and fault status signals</li> </ul>
Bus functions	<ul> <li>Remote operation of Konnex functions with RMZ792 bus operator unit</li> <li>Display of fault status messages received from other devices on the bus</li> <li>Delivery of common fault status messages of all devices on the bus to a fault relay</li> <li>Time synchronization</li> <li>Passing on and adoption of outside temperature signal</li> <li>Sending yearly clock data to other controllers, or reception of yearly clock data from other controllers</li> <li>Sending the 7-day or yearly program for holidays / special days to other controllers, or reception of the program from other controllers</li> <li>Delivery and reception of heat demand signals</li> <li>Common control strategy of a ventilation controller and heating controller for controlling the same room</li> <li>Universal transmission and reception zones</li> <li>Device RMH760B allows for universal data exchange via own terminals as well as via</li> </ul>
	terminals of extension modules RMZ78x. Data between devices is exchanged via KNX bus. Universal inputs, digital and analog outputs of RMH760B can be used as transmission objects (for transmission zones).

	<ul> <li>Universal inputs of RMH760B can be used as reception objects (in reception zones).</li> <li>Transmission zones: Universal inputs (N.X1A9(2).X6) Digital outputs (N.Q1A9(2).Q4) Analog outputs (N.Y1A9(2).Y2)</li> <li>Reception zones: Universal inputs (N.X1A9(2).X6)</li> </ul>
	<ul> <li>Examples for not allowed applications</li> <li>The following applications or input/output values may not be implemented using universal transmission and reception zones:</li> <li>Safety-relevant plants and equipment (e.g. fire alarm off, smoke extraction, frost protection function).</li> <li>If request "Simultaneous start condition of plants" exists.</li> <li>Applications where communications failure of transmission or reception zones may cause damage.</li> <li>Time-critical control paths or control paths with greater degree of difficulty (e.g. speed control via pressure, humidity).</li> <li>Main controlled variables that must be available.</li> <li>Acquisition and evaluation of pulses.</li> </ul>
	<b>Note:</b> After RMH760B power-up, it may take some time until the bus signals are available. This may result in faulty plant behavior in the case of transmission and reception zone applications that are not allowed.
Logic function blocks	<ul> <li>4 freely configurable logic function blocks are available to process multiple logically linked universal input variables.</li> <li>Configurable logic functions: AND, NAND, OR, NOR, EXOR and EXNOR</li> <li>Adjustable switch-on and switch-off delay and minimum switch-on and switch-off time.</li> <li>Operating switch (AUTO, ON, OFF), configurable for manual control.</li> </ul>
Comparators	<ul><li>2 comparators are available to compare two analog input signals.</li><li>Output signal with adjustable switch on and off delay as well as adjustable minimum switch on and off period.</li></ul>
Service and operating functions	<ul> <li>Wiring test</li> <li>Display of setpoints, actual values and active limitations</li> <li>Data protection</li> </ul>
Note	For a detailed description of all controller functions, refer to the Basic Documentation (P3133).

#### Type summary Device Data sheet **Heating controllers** Туре Heating controller **RMH760B-1** N3133 Selection of languages The following languages are loaded: English, German, French, Italian, Spanish, Portuguese, Dutch, Danish, Finnish, Norwegian, Swedish, Polish, Czech, Hungarian, Russian, Slovakian, Bulgarian, Greek, Romanian, Slovenian, Serbian, Croatian, Turkish. Note Starting from software version 3.00, all languages are included in the same type. **Operator and** N3111 Operator unit (plug-in type) **RMZ790** service units Operator unit (detached) **RMZ791** N3112 Bus operator unit **RMZ792** N3113 Service tool OCI700.1 N5655 Service terminal + service tool OCI702 A6V10438951 + ACS790 N5649 OZW772... Web server N5701 Extension modules and Heating circuit module **RMZ782B** N3136 accessories DHW module RMZ783B N3136 Universal module with 4 universal inputs and 4 relay outputs **RMZ787** N3146 Universal module with 6 universal inputs, 2 analog and N3146 **RMZ789** 4 relay outputs **RMZ780** Module connector for detached extension modules N3138 Ordering When ordering, please specify the quantity, product name and type code for the device,

When ordering, please specify the quantity, product name and type code for the device, e.g: Heating controller **RMH760B-1**.

The required operator unit and extension modules must be ordered as separate items.

## Equipment combinations

Possible equipment combinations are available in HIT.


## **Product documentation**


Documentation type	Document no.
Product range description: Synco™ 700	CE1S3110en
Basic documentation, detailed description of all functions	CE1P3133en
Installation instructions: RMH760B, RMK770	CE1G3133xx
Operating instructions: RMH760B, RMK770	CE1B3133xx
Data sheet for KNX bus	CE1N3127en
Synco KNX S-mode data points	CE1Y3110en
Basic documentation: Communication via KNX bus	CE1P3127en

rechnical design	
Mode of operation	The controller is supplied complete with 41 standard types of heating plants ready programmed. Most of them necessitate the use of extension modules. All plant types can be matched to the respective requirements (e.g. configuration as a main controller (district heating connection), configuration of twin pumps, etc.). In addition, an empty application is provided. With the help of the operator unit, the controller facilitates the following: • Activation of a programmed application • Modification of a programmed application • Free configuration of applications • Optimization of settings For more detailed information, refer to the Basic Documentation (P3133).
Note	For a short description and diagrams of all plant types, refer to page 177 ff.
Overview	
	Boiler or district heating         DHW heating         Primary         Maximum 3 heating circuits           connection         controller         controller
Boiler hydraulics	Image: space of the space
Main controller (district heating connection)	Main controller with 2-port valve Main controller with main pump
Primary controller	$ \begin{array}{c} \overbrace{f} \\ \overbrace{f} \\ \overbrace{f} \\ \overbrace{f} \\ frimary controller and district heating connection } \\ \end{array} \begin{array}{c} \overbrace{f} \\ \overbrace{f} \atop \overbrace{f} \atop \overbrace{f} \\ \overbrace{f} \atop \overbrace{f} \\ \overbrace{f} \\ \overbrace{f} \\ \overbrace{f} \\ \overbrace{f} \\ \overbrace{f} \atop $

### **DHW** heating variants

BW 6

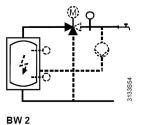


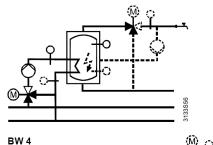


M


Ń

3133S6C

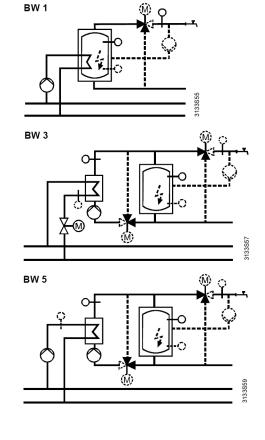


## **Heating circuit**

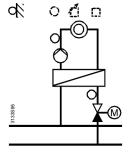

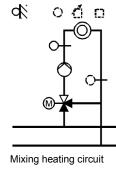

1133S58

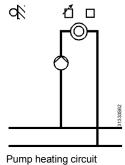

Heating circuit and district heating connection



Control of a single pump with supervision of flow and overload Control of a twin pump with supervision of flow and overload

Ÿ

Þ

Þ

### Commissioning

When commissioning the plant, the relevant plant type is to be entered. Then, all associated functions, terminal assignments, settings and displays will automatically be activated and parameters not required will be deactivated.

For more detailed information, refer to the Basic Documentation (P3133).

8/	2	4
0/	~	+

## Use of extension modules


Extension modules are used when the standard number of inputs and outputs are not sufficient to cover all required functions:

Type of extension module	Universal	Analog	Relay outputs	
	inputs	outputs	NO	Changeover
Heating circuit module RMZ782B	3	1	2	1
DHW module RMZ783B	4	1	3	2
Universal module RMZ787	4	_	3	1
Universal module RMZ789	6	2	2	2

A **maximum of 4** extension modules can be used while giving consideration to the following restrictions:

- Maximum 2 heating circuit modules RMZ782B
- Maximum 1 DHW module RMZ783B
- Maximum 1 universal module RMZ787
- Maximum 2 universal modules RMZ789

### **Mechanical design**

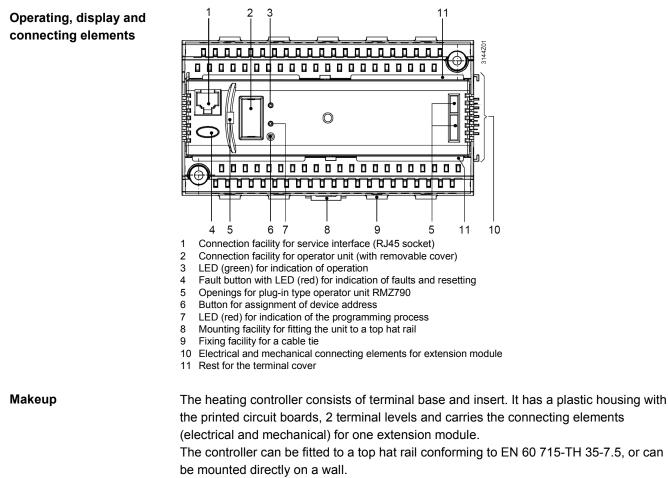


Operation is facilitated via a plug-in type or detached operator unit (refer to "Type summary").

/!\

- The controller can be used in connection with a maximum of 4 extension modules
  - The controller operates on AC 24 V. Operating voltage must conform to the requirements of SELV / PELV (safety extra low-voltage / protective extra low-voltage)
  - The transformers used must be safety isolating transformers featuring double insulation to EN 60742 and EN 61558-2-6; they must be suited for 100 % duty
  - Fuses, switches, wiring and grounding must be in compliance with local safety regulations for electrical installations
  - Sensor wires should not be run parallel to mains carrying cables powering actuators, pumps, etc.
  - To define the details of configuration and to generate the plant connection diagrams, the following pieces of documentation are helpful:
    - Configuration diagrams, contained in the Basic Documentation (P3132)
       Application Sheets
  - The reference room for control with a room temperature sensor should be the space that cools down quickest. That room must not be equipped with thermostatic radiator valves, and manual valves must be locked in their fully open position

## Mounting and installation notes

- Controller and extension modules are designed for:
  - Mounting in standard control cabinets conforming to DIN 43880
  - Wall mounting on existing top hat rails (EN 50022-35×7,5)
  - Wall mounting with 2 fixing screws
  - Flush panel mounting
- Not permitted are wet or damp spaces. The permissible environmental conditions must be observed
- If the controller shall not be operated inside a control panel, the detached RMZ791 operator unit can be used in place of the RMZ790 plug-in type
- Prior to mounting the controller, the system must be disconnected from power
- The controller insert must not be removed from the terminal base!
- If extension modules are used, they must be attached to the right side of the controller in the correct order and in accordance with the internal configuration
- The extension modules require no wiring between them or from the modules to the controller. The electrical connections are made automatically when attaching the modules. If it is not possible to arrange all required extension modules side by side, the first of the detached modules must be connected to the previous module or to the controller using the RMZ780 module connector. In that case, the maximum cable length is 10 m
- All connection terminals for protective extra low-voltage (sensors, data bus) are located in the upper half of the unit, those for mains voltage (actuators and pumps) at the bottom
- Each terminal (spring cage terminals) can accommodate only one solid wire or one stranded wire. To connect the cables, the insulation must be stripped for 7 to 8 mm. To introduce the cables into the spring cage terminals and to remove them, a screwdriver of size 0 or 1 is required
- Cable strain relief can be ensured with the help of the fixing facility for cable ties
- The controller is supplied complete with Installation Instructions and Operating Instructions

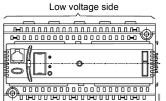

Mains voltage side

- The configuration and parameters of the standard applications programmed in the controller can be changed any time on site by personnel trained by Siemens who have the respective access rights to the plant, using the RMZ790 or RMZ791 operator unit or, online or offline, with the help of the service tool
- During the commissioning process, the application remains deactivated and the outputs are in a defined off state. During this period of time, no process and alarm signals are delivered to the bus
- On completion of the configuration, the controller will automatically be restarted
- When leaving the commissioning pages, the peripheral devices (including the extension modules) connected to the universal inputs will automatically be checked and identified. If, later, a peripheral device is missing, a fault status message will be output
- The operator unit can be removed and plugged in or connected while the controller is in operation
- Adaptations required due to specific plant conditions must be recorded and the relevant document should be stored in the control panel
- The procedure to be followed when starting up the plant for the first time is described in the Installation Instructions

## **Disposal notes**



The device is considered an electronics device for disposal in terms of European Directive 2012/19/EU and may not be disposed of as domestic garbage.

- Dispose of the device through channels provided for this purpose.
- Comply with all local and currently applicable laws and regulations..

## **Technical data**

Power supply (G, G0)	Rated voltage Requirements for external safety isolating transformer	AC 24 V ±20 % (SELV)
	(100 % duty, max. 320 VA)	to EN 60 742 / EN 61 558-2-6
	Frequency	50/60 Hz
	Power consumption (excl. modules)	12 VA
	External supply line protection	fuse max. 10 A (slow release) or
		automatic circuit breaker max. 13 A tripping characteristic B, C, D according to EN 60898
		or power supply with current limiting at 10 A
Functional data	Reserve of clock	
	Typically	48 h
	Minimum	12 h
Analog inputs	Sensors	
X1X6	Passive	1 or 2 LG-Ni 1000, T1, Pt 1000, NTC 575
A.IAV	Active	DC 010 V
	Signal sources	
	Passive	02500 Ω
	Active	DC 010 V
Digital inputs	Contact sensing	
X1X6	Voltage	DC 15 V
	Current	5 mA
	Requirements for status and impulse contacts	
	Signal coupling	potential-free
	Type of contact	maintained or impulse contacts
	Insulating strength against mains potential	AC 3750 V to EN 60730
	Permissible resistance	
	Contacts closed	max. 200 Ω
	Contacts open	min. 50 kΩ
Positioning output Y1, Y2	Output voltage	DC 010 V
	Output current	±1 mA
	Max. loading	continuous short-circuit
▲ Switching outputs	External supply line protection	
Q1xQ5x	Wire fuse (slow)	max. 10 A
	Automatic line cutout	max. 13 A
	Release characteristic	B, C, D to EN 60898
	Cable length	max. 300 m
	Relay contacts	
	Switching voltage	max. AC 250 V / min. AC 19 V
	AC current	max. 4 A res., 3 A ind. ( $\cos \varphi = 0.6$ )
	At 250 V	min. 5 mA
	At 19 V	min. 20 mA
	Switch-on current	max. 10 A (1 s)
	Contact life at AC 250 V	Guide values:
	0.1 A (res.)	$2 \times 10^7$ switching cycles
	NO contact at 0.5 A (res.)	4×10 <sup>6</sup> switching cycles
	Changeover contact at 0.5 A (res.)	$2 \times 10^6$ switching cycles
	NO contact at 4 A (res.)	$3 \times 10^5$ switching cycles
	Changeover contact at 4 A (res.)	1×10 <sup>5</sup> switching cycles
	Reduction factor at ind. (cos $\varphi$ = 0.6)	0.85
	Insulating strength	0.00
	between relay contacts and system	
	electronics (reinforced insulation)	AC 3750 V to EN 60 730-1
	between neighboring relay contacts	
	(operational insulation) Q1⇔Q2; Q3⇔Q4⇔Q5	AC 1250 V to EN 60 730-1
	between relay groups (reinforced insulation) (Q1, Q2)	
	⇔ (Q3, Q4) ⇔ (Q5)	AC 3750 V to EN 60 730-1


Power supply external devices	Voltage	AC 24 V
(G1)	Current	
		max. 4 A
Interfaces	Konnex bus	
	Type of interface	Konnex TP1
	Bus loading number	2.5
	Bus power supply (decentral, can be switched off)	25 mA
	Power failure of short duration to EN 50 090-2-2	100 ms with one extension module
	Extension bus	
	Connector specification	4 contacts SELV / PELV
	Number of plugging cycles	max. 10
	Service tool connection facility	RJ45 socket
Permissible cable lengths	For passive measuring and positioning signals*	
	LG-Ni 1000	max. 300 m
	01000 Ω	max. 300 m
	10001235 Ω	max. 300 m
	Contact sensing	max. 300 m
	For DC 010 V measuring and control signals	refer to Data Sheet of signal-delivering
		device
	For Konnex bus	max. 700 m
	Type of cable	2-core, unshielded, twisted pairs
	* Measuring errors can be corrected via the "Settings > Inputs" menu	
Electrical connections	Connection terminals	spring cage terminals
	Solid wires	0.6 mm dia2.5 mm <sup>2</sup>
	Stranded wires without ferrules	0.252.5 mm <sup>2</sup>
	Stranded wires with ferrules	0.251.5 mm <sup>2</sup>
	Konnex bus connection	wires cannot be interchanged
Protective data	Degree of protection of housing to IEC 60 520	ID20 (when installed)
Protective data	Degree of protection of housing to IEC 60 529	IP20 (when installed)
	Safety class to EN 60 730	device suited for use in equipment of
		safety class II
Ambient conditions	Operation	to IEC 60 721-3-3
	Climatic conditions	class 3K5
	Temperature (housing with electronics)	050 °C
	Humidity	595 % r.h. (non-condensing)
	Mechanical conditions	class 3M2
	Transport	to IEC 60 721-3-2
	Climatic conditions	class 2K3
	Temperature	–25…+70 °C
	Humidity	<95 % r. h.
	Mechanical conditions	class 2M2
Classifications to	Mode of operation, automatic controls	type 1B
EN 60 730	Degree of contamination, controls' environment	2
	Software class	Α
	Rated surge voltage	4000 V
	Temperature for ball-pressure test of housing	125 °C
	;	
Standards, directives and	Product standard EN 60730-1	Automatic electronic controls for
approvals		household and similar use.
	Product family standard EN 50491-3	General requirements for Home and
		Building Electronic Systems (HBES)
		and Building Automation and Control
		Systems (BACS).
	Electromagnetic compatibility (application area)	For residential, commercial, and industrial environments.
	EU conformity (CE)	CE1T3110xx
	RCM conformity	CE1T3110en C1*)
	EAC conformity	Eurasia-conformity
Environmental competibility	The environmental product declaration contains data on	CE1E3110en01
Environmental compatibility	environmentally compatible product design and assessments	
	(RoHS compliance, materials composition, packaging,	
	environmental benefit, disposal)	

	Eco design and labeling directives	Controller class	Efficiency gain
	Application with up to three room temperature sensors and one outdoor temperature sensor and modulating control	VIII	5.0%
	Application with one room temperature sensor and one outdoor temperature sensor and modulating control	VI	4.0%
	Application with one outdoor temperature sensor and modulating control	II	2.0%
	Application with up to three room temperature sensors and one outdoor temperature sensor and on/off control	VII	3.5%
	Application with one room temperature sensor and one outdoor temperature sensor and on/off control	VII	3.5%
	Application with one outdoor temperature sensor and on/off control	Ш	1.5%
Materials and colors	Terminal base	polycarbonate, RAL	7035 (light-grey)
	Controller insert	polycarbonate, RAL	
	Packaging	corrugated cardboar	ď
Weight	Net weight excl. packaging	0.490 kg	

\*) Documents can be downloaded at the following Internet address: <u>http://siemens.com/bt/download</u>

connection terminals							
	▼ <b>▼</b> ▲	▼ ▼	<b>V</b>	▼	•	<b>▼</b> ▼	
G X1 M X2 M G1	K3 M X4 M G1	X5 M X6 M	Q11	Q23	Q33	Q41 Q53	٦
RMH760B				· ┝-□──╂			G01
G0 G1 Y1 G0 G1	<u>12 G0 CE+ CE</u>	– Q12	Q14 N1	Q24 N2	Q34 Q42	Q44 Q54	3133
Notes	<ul> <li>X1X6</li> <li>Y1, Y2</li> <li>Each termir stranded wi</li> <li>Double term</li> <li>With 3-posit suppression</li> </ul>	Konnex bus data lim Konnex bus data lim Operating voltage A System neutral for s Output voltage AC 2 Measuring neutral for Radio interference s Potential-free relay o Universal signal input LG-Ni 1000, 2× LG-I 10001175 Ω (rel. s Control or status out	e, negative C 24 V ignal output 4 V for powering e or signal input uppression elemer outputs (changeow outputs (NO contact st for Ni 1000 (averaging setpoint), contact s puts DC 010 V erminals) can a ly interconnect ators operating activated. For t	nt for 3-position er contacts) for cts) for AC 24. g), T1, Pt 1000 sensing (potent cccommodat ed on AC 230 that purpose	n actuators r AC 24230 V 230 V , DC 010 V, 0. tial-free) te only one so V, the radio i e, terminal N1	1000 Ω (setpoint olid wire or one nterference is to be	;), 9
Connection examples Various low-voltage connections	G0 A1 Konnex de B1 Passive se B2 Active sen F1 Fault conta F2 Fault conta N1 Heating co S1 Manual sw S2 Operationa	G1 M X G0 Y1 G0 Y G0 Y Y1	:h) on the burner c. ner or shutoff valve	F1 51		F2 M X/N1	

## **Connection of 3-position** actuators

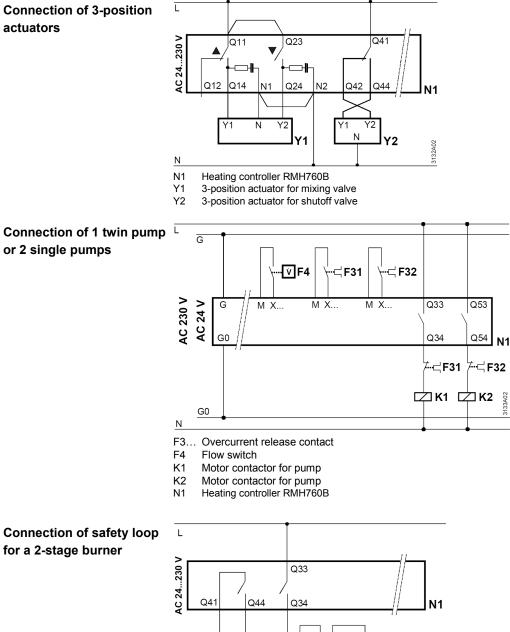

F1

2-stage burner

Limit thermostat

Safety limit thermostat

Heating controller RMH760B

Ν E1

F1

F2

N1

F2

1.

E1

3133A03

16/24

3133A02

## Plant types

Plant type	Descrip	otion	Plant diagram
H0–1	N1:	DHW circuit with storage tank flow controlled via mixing valve and charging pump, connected directly to uncontrolled header (DHW 2 variant)	
H0–2	N1:	Weather-compensated heating circuit control with mixing valve and circulating pump, connected directly to uncontrolled header	
H0–3	A3: N1:	DHW circuit (DHW 2) Heating circuit	
H0-4	N1: A2:	Heating circuit Heating circuit	
H0–5	A3: N1: A2:	DHW circuit (DHW 2) Heating circuit Heating circuit	
			A3 N1 A2
H0–6	N1:	Heating circuit	
	A2(1): A2(1):	Heating circuit Heating circuit	
	A 2 ·		N1 A2(1) A2(2) H0-7
H0–7	A3: N1:	DHW circuit (DHW 2)	
		Heating circuit	
	A2(1):	Heating circuit Heating circuit	
	₩ <b>∠</b> (∠).		A3 N1 A2(1) A2(2)

Plant type	Descrip	otion	Plant diagram
H1–0	N1:	Main controller (district heating connection with heat exchanger), control of the secondary flow temperature with 2-port valve in the primary return, heat supply to internal and external consumers	
H1–1	N1:	Main controller	
	A3:	DHW circuit, storage tank charging from heat exchanger controlled via mixing valve, with primary and secondary pump (DHW 4)	
H1–2	N1:	Main controller	
	A2:	Weather-compensated heating circuit control with mixing valve and circulating pump, connected to secondary side of header	
H1–3	N1:	Main controller	
	A3:	DHW circuit (DHW 4)	
	A2:	Heating circuit	
H1–4	N1:	Main controller	
	A2(1):	Heating circuit	
	A2(2):	Heating circuit	
	N/4	Mate acceleration	N1 A2(1) A2(2)
H1–5	N1: A3:	Main controller	
	A3: A2(1):	DHW circuit (DHW 4) Heating circuit	
		Heating circuit	
	~~(2).		N Q1/Q2 NX3 N1 A3 A2(1) A2(2)
H2–0	N1:	Demand-compensated primary controller with mixing valve and circulating pump; heat supply to external consumers	

Plant type	Descrip	otion		Plant diagram	
H2–1	N1:	Primary controller	H2-1	_#	215821
	A3:	DHW circuit with storage tank flow controlled via mixing valve, with charging pump (DHW 2)	N X10 N Q2 N Q1Q2		
			N1	A3	
H2–2	N1:	Primary controller	H2-2	-0-	3133518
	A2:	Weather-compensated heating circuit control with mixing valve and circulating pump	N 21/02	A2 03 0	
			N1	A2	
H2–3	N1:	Primary controller	H2-3	L L L	3133519
	A3:	DHW circuit (DHW 2)			
	A2:	Heating circuit	N.Q1/Q2	A305 A30102 A30102 A30102	
			N1	A3 A2	
H2–4	N1:	Primary controller	H2-4		1133520
	A2(1):	Heating circuit			Ø
	A2(2):	Heating circuit	N.Q1/Q2	A2 01/02 @	4
			I	A2(1) A2(2)	
H2–5	N1:	Primary controller	H2-5		13521
	A3:	DHW circuit (DHW 2)			
	A2(1):	Heating circuit	N.Q1/Q2		A2.Q1/Q2
	A2(2):	Heating circuit		A3,Q1/02	
			N1	A3 A2(1)	A2(2)
H3–0	N1:	Boiler temperature control with 1- stage burner and boiler pump			1228811E
H3–1	N1:	Boiler temperature control	H3-1		133524
	A3:	DHW circuit with storage tank flow controlled via mixing valve, with charging pump (DHW 2)		A3.05 A3.05 A3.0102	
			N1	A3	

Plant type	Descriț	otion	Plant diagram
H3–2	N1: A2:	Boiler temperature control Weather-compensated heating circuit control with mixing valve and circulating pump	
H3–3	N1:	Boiler temperature control	
	A3:	DHW circuit (DHW 2)	
	A2:	Heating circuit	
H3–4	N1:	Boiler temperature control	
	A2(1):	Heating circuit	
	A2(2):	Heating circuit	
	N1:		N1 A2(1) A2(2)
H3–5	A3:	Boiler temperature control	
		DHW circuit (DHW 2)	
		Heating circuit Heating circuit	
	<b>~±</b> ( <b>±</b> ).		N1 A3 A2(1) A2(2)
H4–0	N1:	Boiler temperature control with 1- stage burner and boiler pump, maintained boiler return temperature controlled via mixing valve	
H4–1	N1:	Boiler temperature control	
	A3:	DHW circuit with storage tank flow controlled via mixing valve, with charging pump (DHW 2)	
H4–2	N1:	Boiler temperature control	
	A2:	Weather-compensated heating circuit control with mixing valve and circulating pump	


Plant type	Descrip	otion	Plant diagram
H4–3	N1:	Boiler temperature control	
	A3:	DHW circuit (DHW 2)	
	A2:	Heating circuit	
H4–4	N1:	Boiler temperature control	
		Heating circuit	
		Heating circuit	A2.03 A2.03 A2.03 A2.03 A2.03 A2.01
	~~(2).		
H4–5	N1:	Boiler temperature control	
	A3:	DHW circuit (DHW 2)	
	A2(1):	Heating circuit	
	A2(2):	Heating circuit	
			Ng1102 N1 A3 A2(1) A2(2)
H5–2	N1:	Weather-compensated heating circuit control from heat exchanger connected to uncontrolled header, with 2-port valve in the primary return	
H5–3	A3:	DHW circuit with storage tank charging from heat exchanger connected to uncontrolled header (DHW 3)	
	N1:	Heating circuit	
H5–4	N1:	Heating circuit	H5-4
	A2:	Heating circuit	
H5–5	A3:	DHW circuit (DHW 3)	
	N1:	Heating circuit	
	A2:	Heating circuit	
			A3 N1 A2

Plant type	Descrip	otion	Plant diagram
H5–6		Heating circuit Heating circuit Heating circuit	
			N1 A2(1) A2(2)
H5–7	A3:	DHW circuit (DHW 3)	
	N1:	Heating circuit	
	A2(1):	Heating circuits	
	A2(2):	Heating circuits	
	N1:	Direct DHW consumption from	A3 N1 A2(1) A2(2)
H6–1	NT.	Direct DHW consumption from heat exchanger connected to uncontrolled header, with circulating pump (DHW 6)	
H6–3	N1:	DHW circuit (DHW 6) and weather-compensated heating circuit control from heat exchangers, with 2-port valve in the primary return	
H6–5	N1:	DHW circuit and heating circuit	H6-5
	A2	Heating circuit	
H6–7	N1:	DHW circuit (DHW 6) and heating circuit	
	A2(1):	Heating circuit	
	A2(2):	Heating circuit	
			N1 A2(1) A2(2)

- Connection terminals of heating controller N1, RMH760B Ν.
- A2. Connection terminals of heating circuit module RMZ782B
- A2(1) Connection terminals of 1st heating circuit module RMZ782B, if 2 heating circuit modules are used
- A2(2) Connection terminals of 2nd heating circuit module RMZ782B, if 2 heating circuit modules are used
- A3. Connection terminals of DHW module RMZ783B
- Q1 Relay terminals, consisting of Q11, Q12 and Q14 (e.g. actuator)
- Relay terminals, consisting of Q23 and Q24 (e.g. actuator) Q2
- Q3 Relay terminals, consisting of Q33 and Q34 (e.g. heating circuit pump)
- Q4 Relay terminals, consisting of Q41, Q42 and Q44 (e.g. storage tank charging pump)
- Relay terminals, consisting of Q53 and Q54 (e.g. boiler pump) Q5
- Configurable input for main controlled variable (e.g. flow temperature)
- X1 X2 Configurable input for auxiliary controlled variable (e.g. outside temperature)
- Х3 Configurable input for auxiliary controlled variable (e.g. return temperature)
- X4 Configurable input for auxiliary controlled variable (e.g. storage tank flow sensor on secondary side)
- X5 Configurable input for auxiliary controlled variable (e.g. storage tank flow sensor on secondary side)

## Dimensions

Dimensions in mm

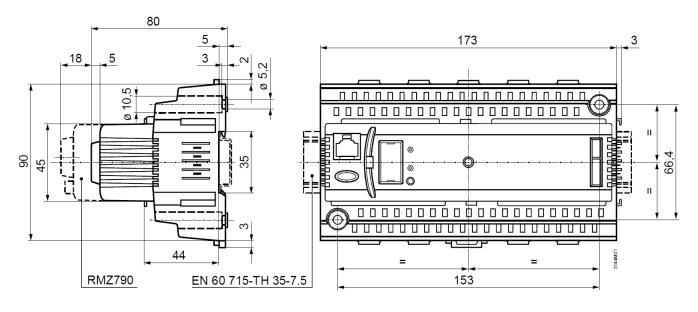

Issued by Siemens Switzerland Ltd Building Technologies Division International Headquarters Gubelstrasse 22 6301 Zug Switzerland Tel. +41 41-724 24 24 www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2006 Technical specifications and availability subject to change without notice.